Datasheet PRA\_COMx



# Scope of Delivery

- Inline adapter with fixed M8-Connector (sensor side) and open ends (host side)

#### **Applications**

The adapter is designed to be used as a communication adapter for our Sensors with UART interface and internal pullup resistors (see "Compatibility"). The adapter delivers standard RS422/485/232 physical layer (depending on version).

The adapter offers the possibility to configure the sensor via remote connection or read the sensor values digitally. Additionally, the analog sensor signal is also available. Parallel usage of digital communication and analog read-out is not recommended due to crosstalk and lowers the sensors analog output performance.

#### **Technical Data**



Size (excl. cables) (ca.)	120 x 30 x 20 mm <sup>3</sup>
Weight (overall)	ZZ g
Material	PUR, PVC
Sensor cable length	0,3 m
Host cable length	2,0 m
Power consumption	<1 W
Connector Host	bare ends
Connector Sensor	M8, female, 5 pin, b-coded
Power Supply line voltage	6 - 30 V (depending on Sensor !)


Delfa Systems GmbH • Im Altseiterstal 7 • 66538 Neunkirchen • info@delfasys.de • +49(0)6821-91 37 100

Datasheet PRA\_COMx



# PRA\_COMx-COM1 (RS422/485, dual simplex)

The adapter uses as the physical layer RS422/485 with dual simplex configuration, i.e. one differential pair as Host-to-Sensor dataline, one differential pair as Sensor-to-Host.

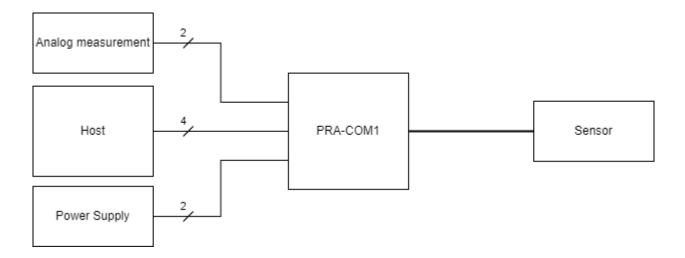

The open ends are to be connected on host side as follows:

Cable color	Function
Brown	Positive supply voltage
Blue	Ground
Gray	Analog output signal
Yellow	Z (Rx-) (*)
Green	Y (Rx+) (*)
Pink	A (Tx+) (**)
White	B (Tx-) (**)

(\*): Rx as seen from host side – sensor to host


(\*\*): Tx as seen from host side - host to sensor

Datasheet PRA\_COMx



## PRA\_COMx -COM2 (RS232)

The adapter uses as the physical layer RS232.

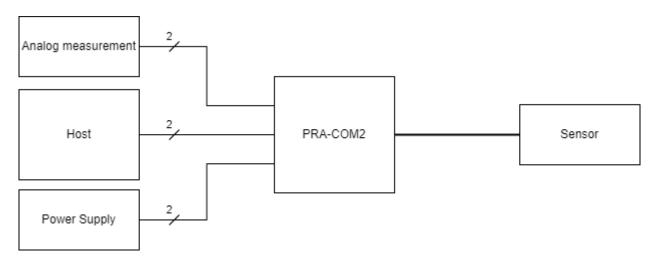


The open ends are to be connected on host side as follows:

Cable color	Function
Brown	Positive supply voltage
Blue	Ground
Gray	Analog output signal
Yellow	Not connected
Green	Tx (**)
Pink	Rx (*)
White	Not connected

(\*): Rx as seen from host side – sensor to host

(\*\*): Tx as seen from host side - host to sensor

#### **Ordering Code**

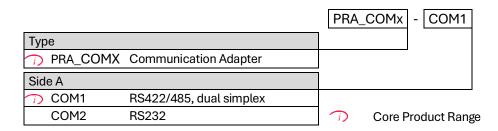

Delfa Systems GmbH • Im Altseiterstal 7 • 66538 Neunkirchen • info@delfasys.de • +49(0)6821–91 37 100

Datasheet PRA\_COMx



# Compatibility

The PRA-COMx adapters are designed to be used with the following sensor configurations:

DST-xxxx-xxx-xxxx-12/24/9X-xx-xx-PUSE